


(一)Keypad

POWER	MENU ENTER	DOWN	UP	LEFT	RIGHT	SOURCE EXIT
-------	---------------	------	----	------	-------	----------------

1	Power Switch	Power On/Off
2	Menu/Enter	Show OSD
3	Down	Adjustment when OSD is shown
4	Up	Adjustment when OSD is shown
5	Left	Adjustment when OSD is shown
6	Right	Adjustment when OSD is shown
7	Source/Exit	Automatically optimize positions, phase & clock when OSD is not shown, Exit OSD when OSD is shown

(二) 操作說明


- ◆ 按下"**Menu/Enter**" 進入OSD介面功能選單
- ◆ 單擊 "**Up**" or "**Down**"選擇上方功能頁籤
- ◆ 按下 "**Menu/Enter**" 進入頁籤功能選項，此時游標將在下方細部選單
- ◆ 單擊 "**Right**" or "**Left**"可修改當前選單功能設定值
- ◆ 要退出OSD選單介面或回上一層功能頁籤須按下"**Source/Exit**"，所修改的內容將會自動被保存
- ◆ 重複上述步驟即可修改OSD其他功能

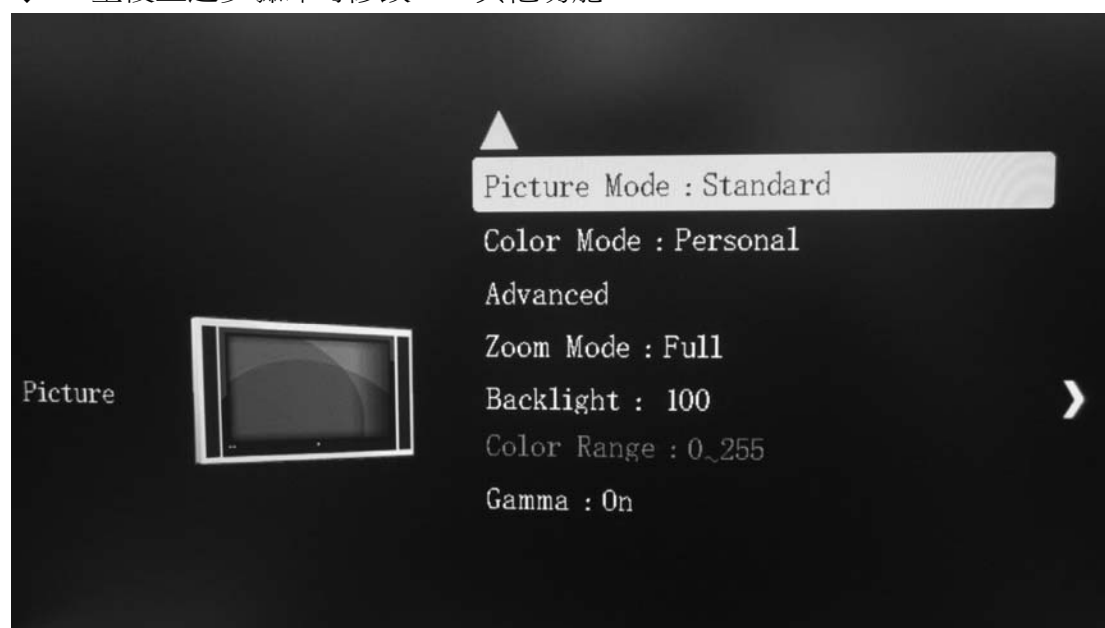

OSD MENU

(三) 操作說明

(1) Picture

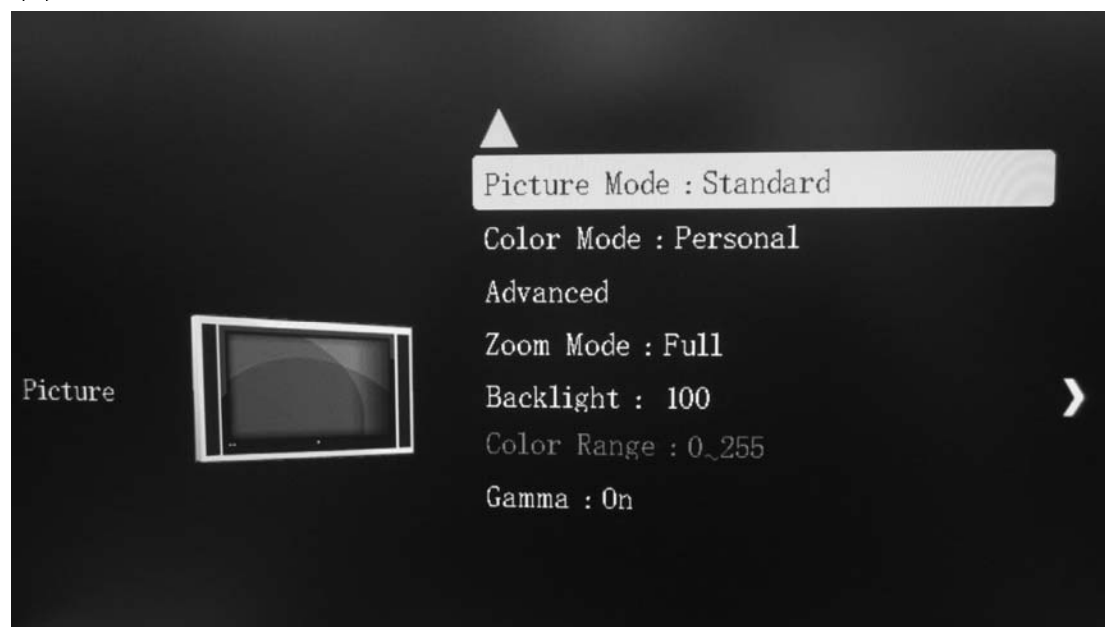


簡介	
圖片模式	調整 標準，個人，柔和，動態 (包括 對比度，亮度，色調，銳度，顏色)。
色調模式	調整 個人，Normal，暖色系，冷色系
進階/高級選項	調整 水平位置，垂直位置，時脈，向移，自動
Zoom Mode	調整 正常顯示，全螢幕，電影模式，16:9
背光亮度	調整背光 0~100
色差調整	顯示顏色色差0~255
Gamma	設定開啟或關閉

(2) Audio



	簡介	
Audio	Equalizer	調整 標準， 音樂， 電影， 運動， 個人
	環繞聲	調整環繞模式開啟或關閉
	AVC	調整AVC開啟或關閉

(3) Setup

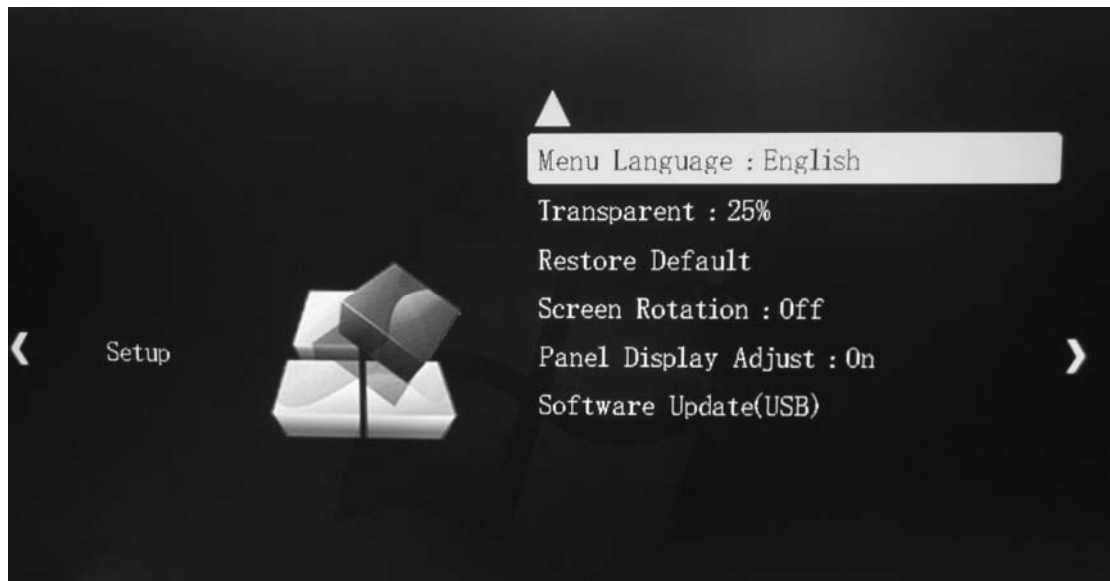

簡介	
語系	語言選項 英語，法文，西班牙文，德文，義大利文，葡萄牙文，俄羅斯文，中文
透明度	選單介面 0%、25%、50%、75%、100%
恢復預設值	Initial Setting
屏幕旋轉	開啟或關閉
面板顯示調整	開啟或關閉
更新韌體版本	購過USB更新